

EMS447 Engine Monitoring System

Instruction Supplement for 2003 and Later Versions



Removing the Circuit Board

Should it become necessary to identify your circuit board configuration, remove the EMS447 circuit board from its case following these steps:

1. Undo the connector and the screws (on the back of the case).
2. Undo the two Phillips (cross) type screws, on the face plate.
3. Gently, pull the circuit board and face plate together out of the EMS447 case. The EMS447 circuit board configuration designation is controlled by several factors: (see the call-outs on picture below) The Program Chip is labeled with your Program Number, Version, Date and Checksum.

LK1 Information (Input/Output Configuration)

(On previous model LK1 had an "In" position and an "Out" position).

LK 1 determines your input/output configuration (see Link 1 call-out below). When installed, it enables a 4th digital input and disables the 7th digital output. When removed, it disables the 4th digital input and enables the 7th digital output (see page 6 on EMS-94072N literature or see page 7 on EMS-94132N).

LK2 Information Configuring Analog Inputs 0 to 7

LK2 is used to configure analog inputs 0 through 7 for a particular program. The choices are: resistive* type sender / digital, 4 to 20 mA or 0-5 VDC. The following is based on orienting the board with the DB25 connector on the bottom. Putting the shunt across the top and middle pins, configures the analog input for either a resistive type sender or a ground only digital. Across the middle and bottom pins configures the analog for a 4-20 mA. Leaving the shunt off, configures the analog for a 0-5 VDC signal.

*Analog 0 has choices: Battery Monitor/ digital/ 4-20 mA /0-5 VDC.

To display battery VDC, or if the program uses a resistive type sender on any of the analogs, such as a Murphy ES2P, ES2T, or ES2F, analog 0 becomes not available and must have the shunt in the sender/digital position. Use only two wire senders and run both wires back to the EMS447, one to ground and one to the input. The EMS447 program used must support the way the analogs are configured.


LK4 to LK6 Information Configuring Relay and Transistor Outputs (New on this model)

LK4, LK5, LK6 These links are used to configure the first three outputs to be either relay switched battery plus OR sink to ground transistor type. Each output can be selected independent of the others. With the board oriented with the LED's to the left and the DB25 Connector toward you, placing the shunt on the left two pins configures the output as a relay. Placing the shunt on the two right pins configures the output as a transistor. There is an R and a T silk-screened on the board to help. LK4 configures Output 1, LK5 configures Output 2, and LK6 configures Output 3.


Status LED Description

The Universal EMS447 controller has new status LED's that show the following from top to bottom:

1. Tachometer Signal Strength. The brighter the LED the stronger the frequency signal.
2. RS485 Transmit. The LED lights each time a data packet is transmitted.
3. RS485 Receive. The LED lights each time a data packet is received.
4. Power OK. This light lights if the internal power supply is working properly.

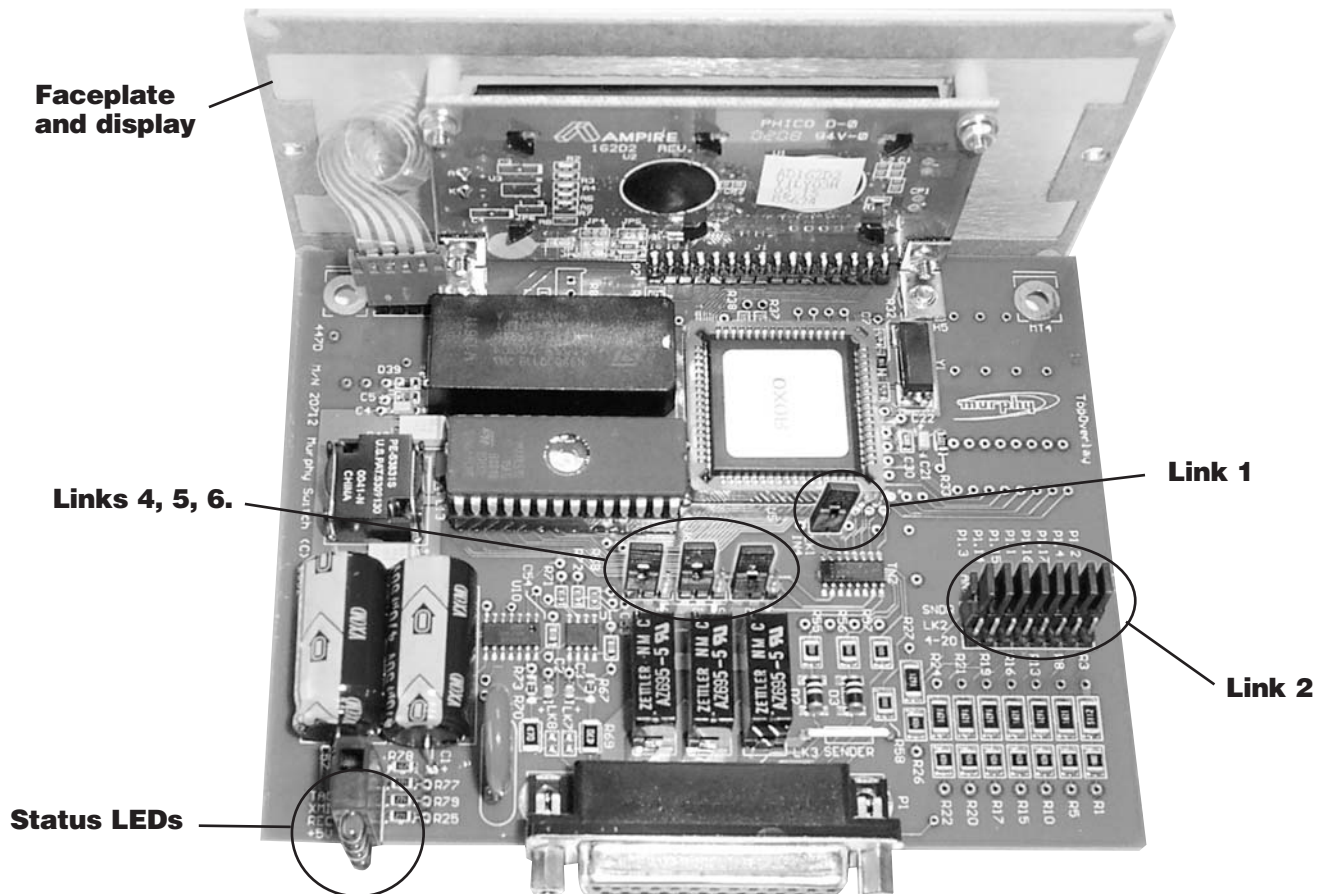

**EMS447 Engine Monitoring System
Installation and Mounting Dimensions for EMS447
Manufactured After May 2003 (Date code X5 or later.)**

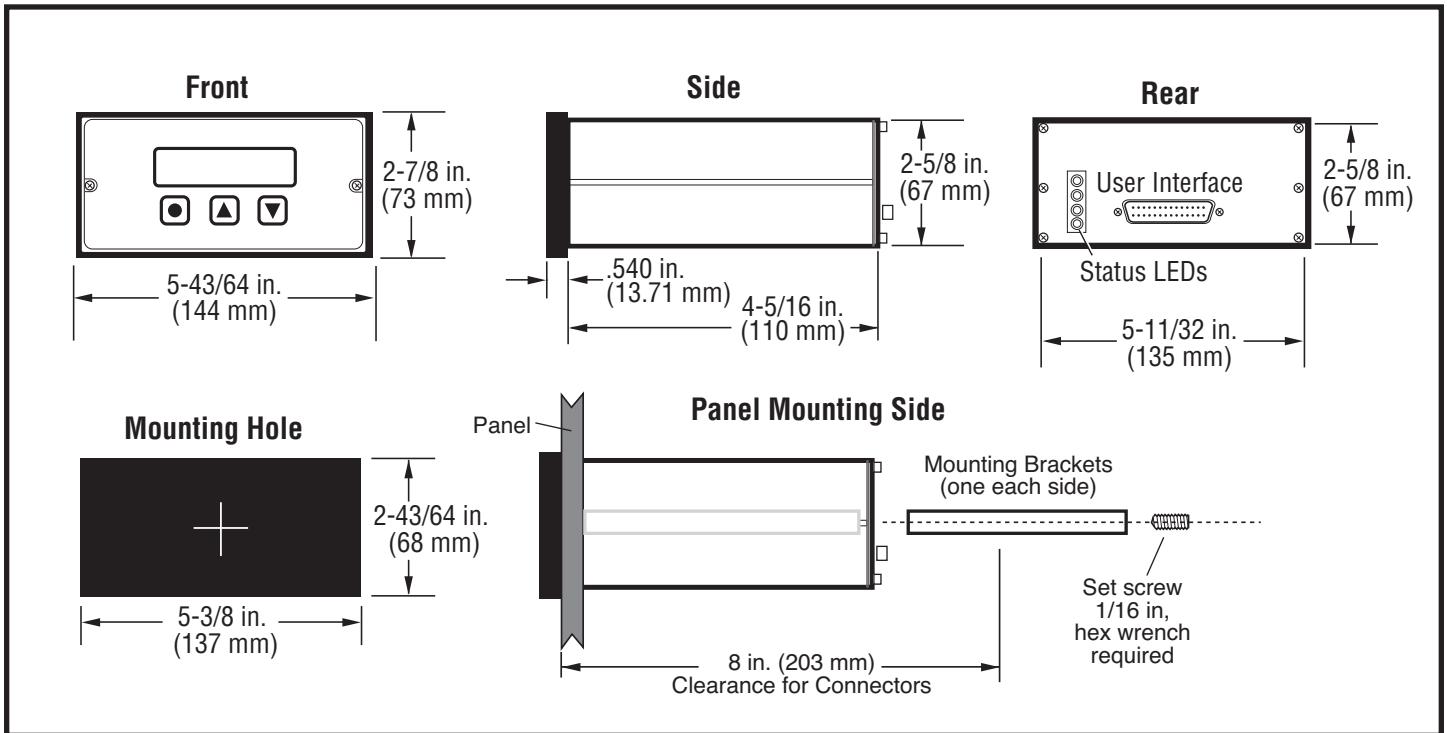

Warranty

A limited warranty on materials and workmanship is given with this FW Murphy product.
 A copy of the warranty may be viewed or printed by going to www.fwmurphy.com/support/warranty.htm



FW Murphy
 P.O. Box 470248
 Tulsa, Oklahoma 74147 USA
 +1 918 317 4100
 fax +1 918 317 4266
 e-mail sales@fwmurphy.com
 www.fwmurphy.com

CONTROL SYSTEMS & SERVICES DIVISION
 P.O. Box 1819; Rosenberg, Texas 77471; USA
 +1 281 633 4500 fax +1 281 633 4588
 e-mail sales@fwmurphy.com

MURPHY DE MEXICO, S.A. DE C.V.
 Blvd. Antonio Rocha Cordero 300, Fracción del Aguaje
 San Luis Potosí, S.L.P.; México 78384
 +52 444 8206264 fax +52 444 8206336
 Villahermosa Office +52 993 3162117
 e-mail ventas@murphymex.com.mx
 www.murphymex.com.mx

FRANK W. MURPHY, LTD.
 Church Rd.; Laverstock, Salisbury SP1 1QZ; U.K.
 +44 1722 410055 fax +44 1722 410088
 e-mail sales@fwmurphy.co.uk
 www.fwmurphy.co.uk

MURPHY SWITCH OF CALIFORNIA
 41343 12th Street West
 Palmdale, California 93551-1442; USA
 +1 661 272 4700 fax +1 661 947 7570
 e-mail sales@murphyswitch.com
 www.murphyswitch.com

MACQUARRIE CORPORATION
 1620 Hume Highway
 Campbellfield, Vic 3061; Australia
 +61 3 9358 5555 fax +61 3 9358 5558
 e-mail murphy@macquarrie.com.au



In order to consistently bring you the highest quality, full featured products, we reserve the right to change our specifications and designs at any time.

Printed in U.S.A.